





THREE STEPS TO START YOUR CAR



ALL WITHIN 5 MINUTES OR LESS



www.rezervo.us

MULTIPLE CHARGING METHODS



FROM YOUR OWN WEAK BATTERY



FROM USB



FROM 12V SOCKET

HOW IT WORKS

The REZERVO batteryless jump starter uses ultracapacitor technology. It is able to harness the power from your weak battery and boost it to start your car. With built-in intelligent circuitry designs, it also prevents you from making mistakes while using the jump starter.

SPECIFICATIONS:

Input	12V DC 10A, 5V DC 2A
Starting Current	300A
Working Temperature	-30°F to 140°F
Recharge Time from Battery	~100 seconds
Recharge Time from 12V Socket	~150 seconds
Recharge Time from USB	~25 minutes

- For gasoline and diesel engines
 - Built-in Reverse Polarity and Short Circuit Protection
 - **Built-in voltmeter**
- No degradation in performance with subfreezing temperatures or age
- * Micro USB charging time will vary depending the amperage (i.e. lower amperage will resort in longer charging time)



MORE INFORMATION

L (888) 452-2526

www.rezervo.us