



| Part No. | Description                      | Q'TY | Part No. | Description                      | Q'TY | Part No. | Description       | Q'TY |
|----------|----------------------------------|------|----------|----------------------------------|------|----------|-------------------|------|
| 01       | Hydraulic Block & Cylinder assy. | 1    | 37       | O-Ring                           | 1    | 73       | Spring Washer     | 3    |
| 02       | Release Valve                    | 1    | 38       | Secondary Bearing                | 1    | 74       | Screw             | 3    |
| 03       | O-Ring                           | 6    | 39       | Set Screw                        | 1    | 76       | O-Ring            | 1    |
| 04       | Check Ball                       | 1    | 40       | O-Ring                           | 2    | 77       | Air Release Screw | 1    |
| 05       | Check Ball                       | 1    | 41       | Back-up Ring                     | 1    | 101      | Legs              | 2    |
| 06       | Short Separator Spring           | 1    | 42       | Split Ring                       | 1    | 102      | Spring Washer     | 12   |
| 07       | Check Ball                       | 1    | 43       | Primary Cylinder Nut             | 1    | 103      | Screw             | 8    |
| 08       | Long Separator Spring            | 1    | 44       | Primary Ram                      | 1    | 104      | Caster            | 4    |
| 09       | Copper Washer                    | 1    | 45       | Back-up Ring                     | 1    | 105      | Nut               | 4    |
| 10       | Valve Cover Screw                | 1    | 46       | O-Ring                           | 1    | 201      | Saddle Base 1     | 1    |
| 11       | Check Ball                       | 1    | 47       | Air Cylinder w/Base              | 1    | 202      | Saddle Base 2     | 1    |
| 12       | Spring End Cap                   | 1    | 48       | Extension Spring                 | 1    | 203      | Flat Plate        | 1    |
| 13       | Overload Spring                  | 1    | 49       | Release Rod                      | 1    | 204      | Screw             | 1    |
| 14       | O-Ring                           | 1    | 50       | Nut                              | 3    | 205      | Adjust Pin        | 2    |
| 15       | Overload Cover Screw             | 1    | 51       | Link Body                        | 1    | 206      | Snap Ring         | 4    |
| 16       | Cover                            | 1    | 52       | Release Pivot Pin                | 5    | 207      | Pin               | 2    |
| 17       | Set Screw                        | 5    | 53       | Release Pedal                    | 1    | 208      | Snap Ring         | 4    |
| 18       | Screw                            | 2    | 54       | Snap Ring                        | 5    | 209      | Angle Tilt Screw  | 2    |
| 19       | Copper Washer                    | 2    | 55       | Up Pedal                         | 1    | 210      | Adjust Pin        | 2    |
| 20       | Link Swivel                      | 1    | 56       | Support                          | 2    | 211      | T-Bearing         | 2    |
| 21       | Pump Housing                     | 1    | 57       | Release Stem                     | 2    | 212      | Washer            | 2    |
| 22       | Suction Tube                     | 1    | 58       | O-Ring                           | 2    | 213      | Hex Nut           | 2    |
| 23       | O-Ring                           | 1    | 59       | Release Valve                    | 2    | 214      | Saddle Angle 1    | 2    |
| 24       | Back-up Ring                     | 1    | 60       | Release Spring                   | 2    | 215      | Screw             | 4    |
| 25       | Oil Wiper                        | 1    | 61       | Release Body                     | 2    | 216      | Washer            | 4    |
| 26       | Piston                           | 1    | 62       | Seal                             | 2    | 217      | Nut               | 4    |
| 27       | Yoke                             | 1    | 63       | Copper Washer                    | 2    | 218      | Saddle Angle 2    | 2    |
| 28       | Piston Pin                       | 1    | 64       | Air Pressure Release Valve Assy. | 2    | 219      | Saddle Angle 3    | 2    |
| 29       | Yoke Pin                         | 1    | 65       | Muffle                           | 1    | 220      | Screw             | 4    |
| 30       | Retaining Pin                    | 1    | 66       | Air Pressure Valve Assy.         | 1    | 221      | Washer            | 4    |
| 31       | Handle                           | 1    | 67       | Coupler Body                     | 1    | 222      | Nut               | 4    |
| 32       | Ram                              | 1    | 68       | Coupler                          | 1    | 223      | Hook Bolt         | 2    |
| 33       | O-Ring                           | 3    | 69       | Hex Screw                        | 1    | 224      | Wing Nut          | 2    |
| 34       | Split Ring                       | 1    | 70       | Tube Coupler                     | 4    | 225      | Chain Connector   | 2    |
| 35       | Secondary Cylinder Nut           | 1    | 71       | Tube                             | 2    | 226      | Chain             | 2    |
| 36       | Reservoir                        | 1    | 72       | Cover                            | 1    | 227      | Connect Screw     | 2    |