


1.5 SUPERSEAL TERMINAL RATCHETING CRIMPER KIT



Adjustable

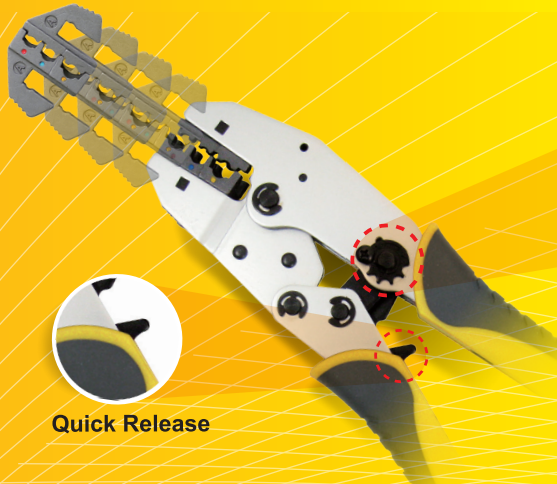


Quick Release



H2



For AMP 1.5 Superseal Terminal

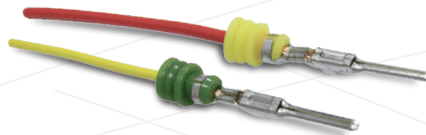

AWG 22-20/16
0.35-0.5/1.5 mm²



H3



For AMP 1.5 Superseal Terminal




AWG 18/17
0.75/1.0 mm²




WHERE TO USE




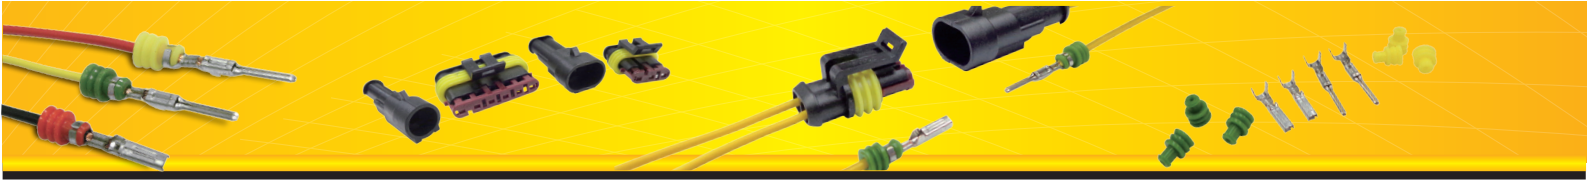


HOW TO ASSEMBLE SUPERSEAL AUTO CONNECTORS

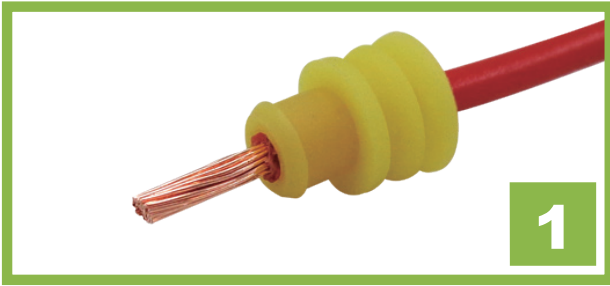


1
Load seal onto stripped wire
(wire stripped 3.5mm)

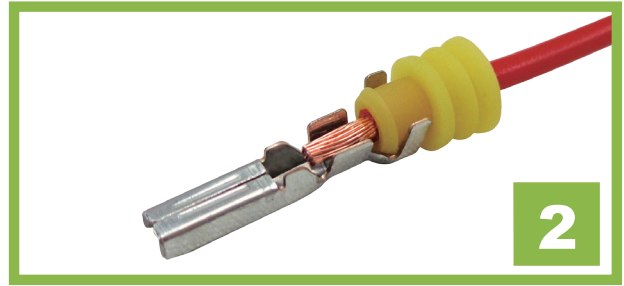


2
Terminal, seal, and wire
(positioned to be crimped)

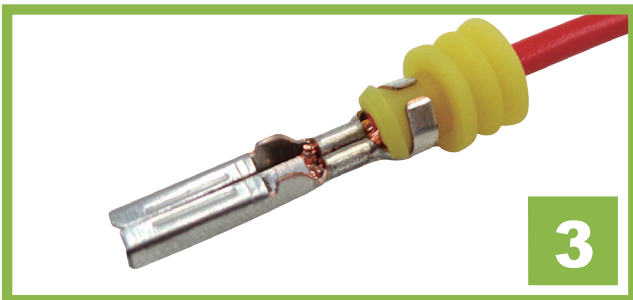


3
Crimp 1.5 Superseal terminal & seal
in one operation

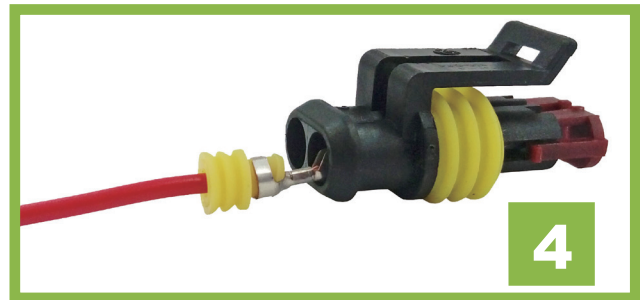

4
Insert into housing

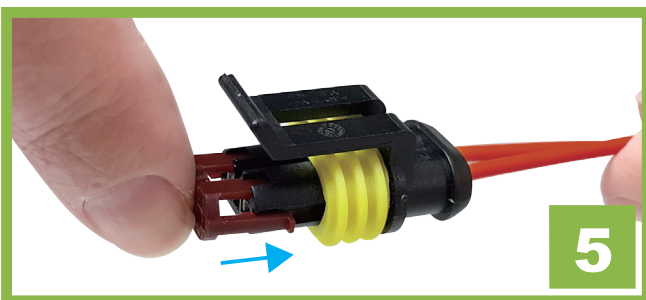

5
Once all crimped terminals & seals
are inserted, close the red lock with
a click as shown above

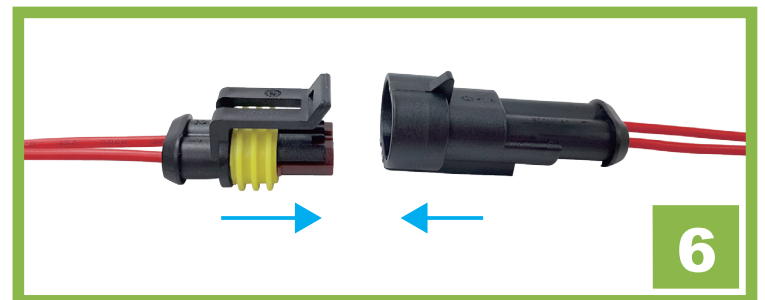

6
Once steps 1, 2, 3, 4 and 5 are completed
for male and female housings, connect
together until locked.