
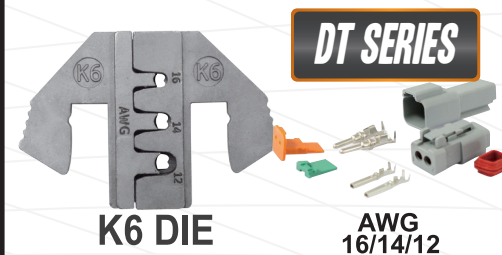
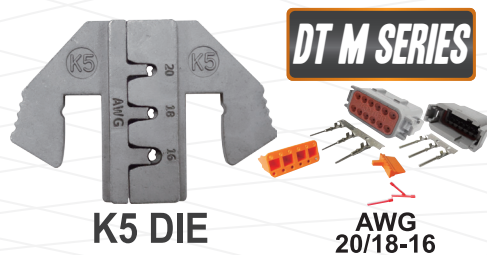
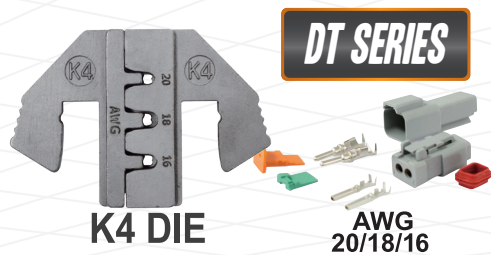
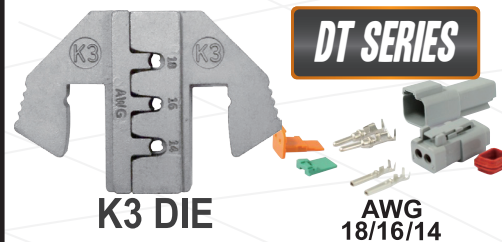
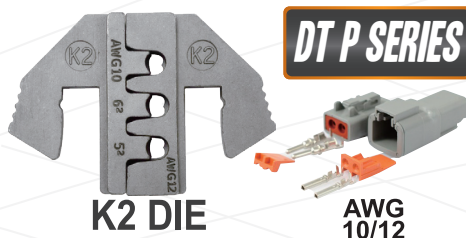





**QUICK CHANGE**

# CRIMPER FOR DEUTSCH TERMINALS

## (STAMPED AND FORMED STYLE)

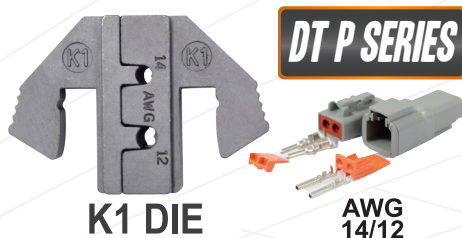

## WHERE TO USE

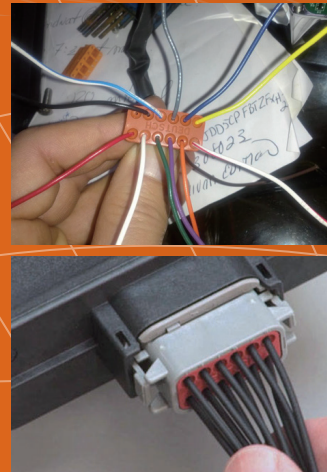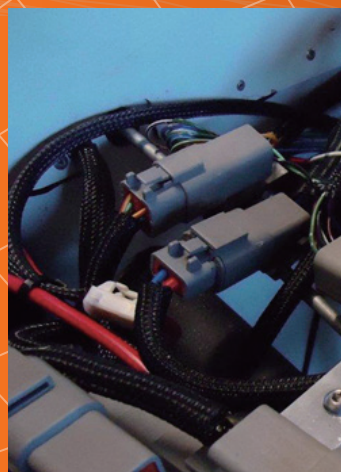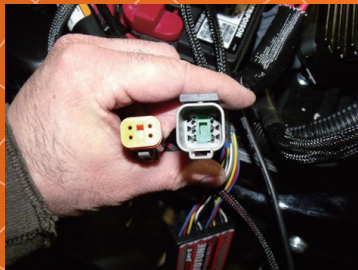

# HOW TO CRIMP DEUTSCH CONNECTORS



1



**Strip length according to the contact size.**

2



**Terminal and wire positioned to be crimped.**

3



**Crimp is completed in one operation.**

Steps for choosing wire, terminal, housing and die set.

	(AWG) 6	8	10	12	14	16	18	20	22	24
<b>Checking:</b>										
(1) Wire AWG										
↓										
(2) Terminal Size										
↓										
(3) Housing										
↓										
(4) Die Set										



**DT P Series**  
for Size 12

**DT M Series**  
for Size 20

**DT Series**  
for Size 16

**K2 Die**  
for Size 12

**K1 Die**  
for Size 12

**K3 Die**  
for Size 16

**K6 Die**  
for Size 16

**K4 Die**  
for Size 16

**K5 Die**  
for Size 20